

PRODUCT SPECIFICATION

Customer	
Project	
Part No.	Z13002-P13-789V-总成 1
Remarks	□APPOVAL FOR SPECIFICATION ONLY ■APPOVAL FOR SPECIFICATION AND SAMPLE

CUSTOMER			ZHUNYIKEJI			
Approved	Checked	Prepared	Approved	Checked	Prepared	
Ву	Ву	Ву	Ву	Ву	Ву	
				Wan Visali	Yang	
				Wen Xiaoli	Zifeng	



Revision Record

Rev. No.	Date	Description
V1.0	2022-05-16	Preliminary Specification Release.

Contents

1. General Specifications	3
2. Interface Definition Description	4
3. Mechanical Drawing	5
4. Electrical Specifications	7
5. Delivery Inspection	11
6. Reliability Test	13
7. Precautions	14
8. Packing and Storage	16

1. General Specifications

No.	Item	Specification	Unit
1	Display Size (Diagonal)	1.3	inch
2	Display Resolution	240(H) × RGB × 240 (V)	pixels
3	Pixel Pitch	97.5(H) × 97.5 (V)	um
4	LCM Outline Dimension (Without FPC)	26.17 (W) ×29.22 (H) ×1.5 (T)	mm
5	LCD Outline Dimension	25.8 (W) × 28.4 (H) × 0.4 (T)	mm
6	LCD Active Area	23.4 (W) ×23.4 (H)	mm
7	View Direction (Gray Inversion)	FULL VIEW	-
8	Driver IC	ST7789V2-G4-A	-
9	Pixel Arrangement	RGB-Stripe	-
10	Display Mode	Normal Black	-
11	Pixel driving Element	a-Si TFT	-
12	LCD Transmittance	Typ.: 4.65% Min:4.18%	-
13	LCD Contrast Ratio	Typ.: 800 Min:640	-
14	FPC Version	Z13002-P13 V1	-
15	Interface	SPI	-
16	Operating Temperature	-20°C∼ 70°C	-
17	Storage Temperature	-30°C∼ 80°C	-
18	Backlight Arrangement	LED/1 Series 2 Parallel (2 lights in total)	-
19	Luminance	TBD	nit
20	Weight	TBD	kg



2. Interface Definition Description


PIN NO.	PIN DEF.	FUNCTION DESC.
1	GND	Ground
2	LEDK	POWER SUPPLY- FOR BACKLIGHT CATHODE
3	LEDA	POWER SUPPLY- FOR BACKLIGHT ANODE
4	VDD	POWER SUPPLY (2.8V/3.3V)
5-6	GND	Ground
7	D/C	LCM Display data/command selection pin in parallel interface
8	CS	LCM SPI Chip Select PIN
9	SCL	LCM SPI clock (SCL) clock (SCLK)
10	SDA	LCM SPI data (SDA) data input (MOSI)
11	RESET	LCM RESET PIN
12	GND	Ground

RESET voltage should be consistent with VDDI voltage, or there probably is black screen fault when power on.




3. Mechanical Drawing

3.1 LCM

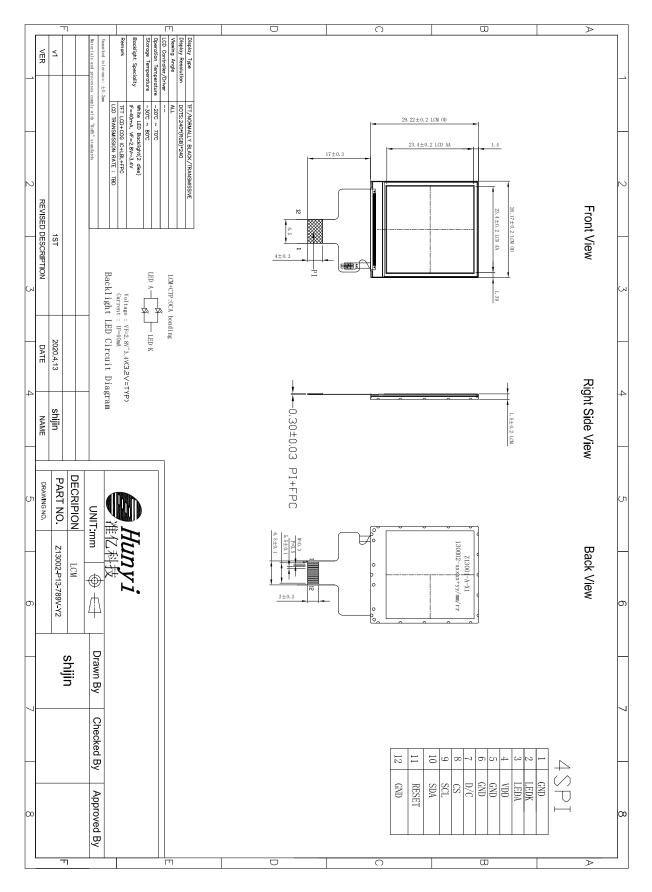



3.2 TLCM

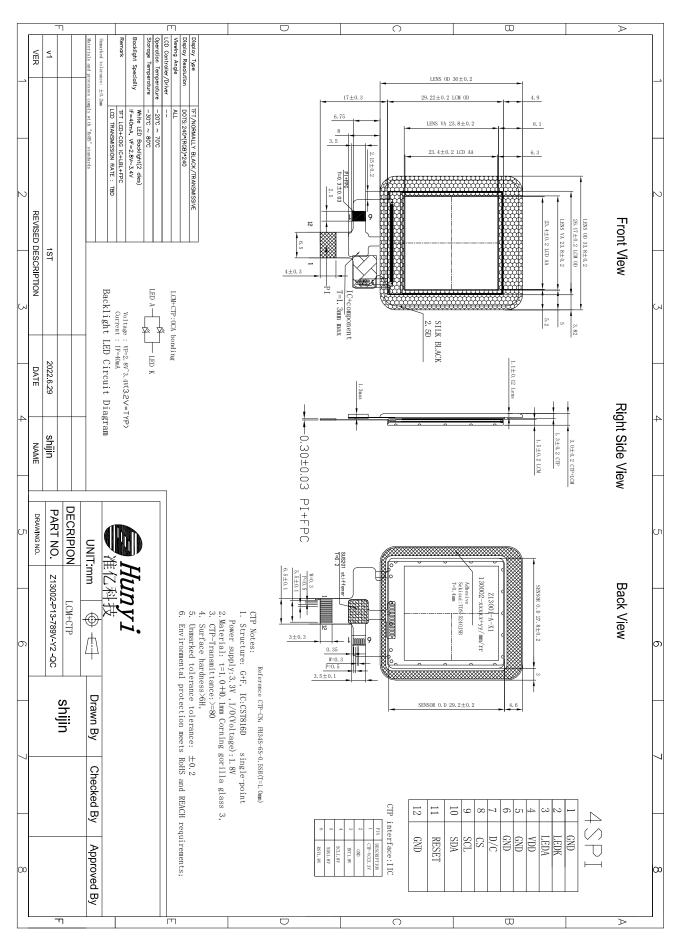

4. Electrical Specifications

4.1. LCD Optical Characteristics

Item		Symbol Condit	Canditions	Specification			Unit	Note
			Conditions	Min.	Тур.	Max.	Unit	Note
Transmittance (V	With PL)	T(%)	Viouing	4.18	4.65	-	%	-
Contrast Ra	Contrast Ratio		Viewing normal angle	640	800	-	-	-
Response Time		TR+TF	-	30	35	ms	-	
				-	80	-		
Viswing Angle	Hor.	Өх-	CR ≥ 10	-	80	-	ما الم	
Viewing Angle	V- ·	Өу+	at 25℃	-	80	-	deg.	-
	Ver.		-	80	-			

4.2. Electrical Specifications

Item	Symbol	S	Unit		
Item	Symbol	Min.	Тур.	Max.	Unit
Power For Analog Circuit	AVDD	6.4	6.6	6.8	V
TFT Gate On Voltage	VGH	12	12	14.97	V
TFT Gate Off Voltage	VGL	-12.5	-8	-7.16	V
TFT Common Electrode Voltage	Vcom	-2	-	0	V

4.3. Typical Operating Conditions-2

-Item	Symbol	Min.	Тур.	Max.	Unit
Analog Supply Voltage	VDD	2.4	2.8	3.3	V
I/O Supply Voltage	IOVCC	1.65	1.8	3.3	V
Input High Voltage	VIH	0.7 × IOVCC	-	IOVCC	V
Input Low Voltage	VIL	GND	-	0.3 × IOVCC	V



Output High Voltage	VOH	0.8 × IOVCC	-	IOVCC	V
Output Low Voltage	VOL	GND	-	0.2 × IOVCC	V

4.4. Backlight Circuit Specifications

Item		Symbol	Min.	Тур.	Max.	Unit	Test Condition
Current		I_{B}	-	40	-	mA	-
Voltage		$V_{\rm f}$	2.8	3.1	3.4	V	-
LCM Unifor	mity	-	80	-	-	%	TC 40 4
Life Tim	e	-	30000	-	-	Hr.	- If=40mA
Power Consur	nption	PBL	-	124	-	mW	
	- 1	Rx	TBD	TBD	TBD		
	Red	Ry	TBD	TBD	TBD		
TI CO I		Gx	TBD	TBD	TBD		
TLCM	Green	Gy	TBD	TBD	TBD		Average the brightness
Chromaticity	D.	Bx	TBD	TBD	TBD		EV at 9 points, Optical
Coordinate	Blue	Ву	TBD	TBD	TBD		Instrument BM-7
	1171	Wx	TBD	TBD	TBD		
	White	Wy	TBD	TBD	TBD		

4.5. LCD Power Consumption


Mode	Symbol	Тур.	Max.	Unit				
Normal Mode	VDD+IOVCC	-	-	mA				
Test Condition: VDD=2.8V.								
Interface Drive	Interface Drive Type: row flipping or column flipping.							
IPS Type LCD F	Panel => All Black Pattern.							
TN Type LCD Panel => All White Pattern.								
Temperature: 25°C.								
Mode	Symbol	Тур.	Max.	Unit				



Sleep Mode		VDD+IOVCC	-	-	μΑ
Test Condition: VDD=2.8V.					
DC/DC converter is enabled. Internal oscillator is started and panel scanning is started.					
Except for the IC internal crystal oscillator and panel scanning, other functions are suspended.					
Temperature: 25°C.					


4.6. Measuring System

4.6.1. LCM Viewing Angle

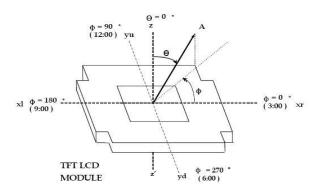

Viewing angle is the angle at which the contrast ratio is greater than 10. The angles are determined for the horizontal or x axis and the vertical or y axis with respect to the z axis which is normal to the LCD surface.

4.6.2. Response Time

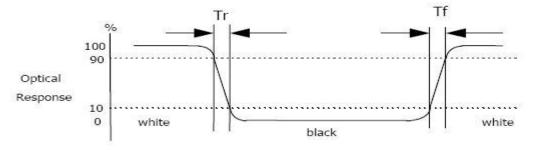

Response time is the time required for the display to transition from white to black (Rising time, Tr) and from black to white (Falling time, Tf) for additional information.

4.6.3. Contrast Ratio (CR)

Contrast Ratio (CR) is defined mathematically as:


Contrast Ratio = $\frac{\text{Surface Luminance with all white pixels}}{\text{Surface Luminance with all black pixels}}$

Surface luminance is the center point across the LCD surface 500mm from the surface with all pixels displaying white.

4.7. Power On / Power Off

4.7.1. Power On/Off

The power on/off sequence is illustrated below

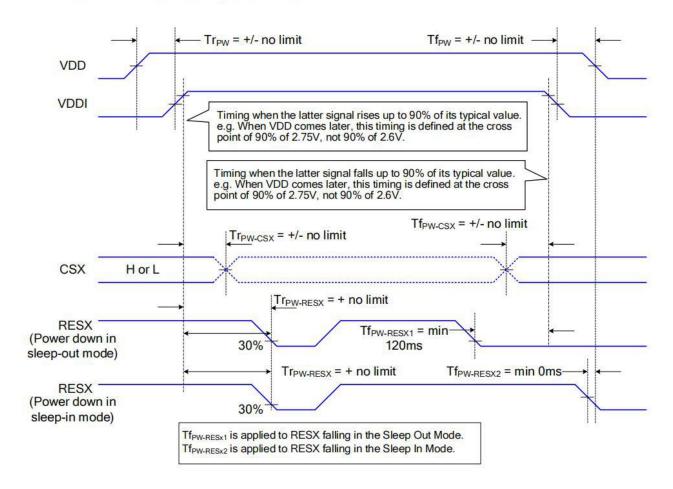

The uncontrolled power-off means a situation which removed a battery without the controlled power off sequence. It will neither damage the module or the host interface.


If uncontrolled power-off happened, the display will go blank and there will not any visible effect on the display (blank display) and remains blank until "Power On Sequence" powers it up.



5. Delivery Inspection

5.1. Quality Inspection Environmental Conditions

- 5.1.1. Viewing distance: the normal viewing distance between the screen and the inspector is 30±5cm; Inspection Angle: 90°±45° (90° indicates that the inspector's perspective is perpendicular to the product to be inspected).
- 5.1.2. Visual inspection illumination: 1000±200LUX;Electrical inspection illumination: 200±100LUX;Ambient temperature 25±5°C, ambient humidity 55±15%RH.

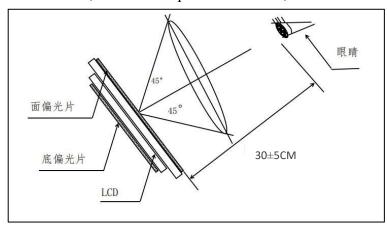

5.2. Quality Inspection Standard

No.	Defect		Standard	Defect Grade	Result	
		< 7 inches	Φ ≤ 0.10mm	Ignore	OK	
			$0.10\text{mm} < \Phi \leq 0.20\text{mm}$	Minor Defect	OK	
	Smot Defect		DS ≥ 10mm			
	Spot Defect (including bright		Φ > 0.20mm	Serious Defect	NG	
	spot / color spot /		$\Phi \leq 0.15 mm$	Ignore	OK	
	bubble / dark	≥ 7 inches	$0.15mm < \Phi \leq 0.25mm$		OK	
	spot, etc.)		DS ≥ 10mm	Minor Defect		
			$\Phi \ge 0.25 \text{mm}$	Serious Defect	NG	
		Φ: defect diameter. DS: spacing.				
2	Linear Defect	< 7 inches	W≤0.02mm,	Ignore	OK	
	(scratches,	V menes	L: unlimited	ignore		



	filaments, etc.)		$0.02 \text{mm} < W \le 0.03 \text{mm}$		Minor Defect	ОК
				L≤5mm		
			W > 0.	03mm	Serious Defect	NG
			W ≤ 0.03mm		Ignore	OK
		≥ 7 inches	L: unlimited			
			$0.03mm < W \leq 0.05mm$		Minor Defect	OK
			$L \leq 5mm$			
			W > 0.05mm		Serious Defect	NG
		W: defect width	. L: defect length. D	S: spacing.		
		Display Area	Judge by S	pot Defect		
		olarizer Bubble Black Edge	The distance from the edge of the		Minor defect	ОК
3	3 Polarizer Bubble		display area is greater than 0.5mm.			
		Area	The distance from the edge of the		Judge by Spot Defect	
			display area is less than 0.5mm.			
	Polarizer Bump	Display Area / Invisible whe		e touch screen or		OK
4	(Mark)	Black Edge	cover plate is assembled.		Minor Defect	
	,	Area				
		Item	Method	Instrument	Median	Tolerance
						Range
		Color	x, y Color	Optical Instrument	According to the	± 0.04
5 Color and Luminance					actual test on the	
		Coordinate	BM-7	sample confirmed		
	Luminance				by the customer.	
		Luminance	Average the Optical		According to the	
			brightness EV at 9 points	Instrument BM-7	actual test on the	± 20%
					sample confirmed	
			1		by the customer.	
6	Other Standards	Subject to the negotiation by both parties.				



7	Warranty Period	One year after sale.		
8	Guarantee	ROHS、REACH		
9	Websites	Official: https://en.zhunyikeji.com/ Globle Resources: https://zhunyikeji.en.alibaba.com/ Alibaba: https://zhunyikeji.en.alibaba.com/ 1688: https://shop9641057ru80o3.1688.com/		

6. Reliability Test

Item	Condition	Result Determination
High-Temperature Storage	80°С 120Н	
Low-Temperature Storage	-30°C 120H	After the test, leave the LCD
High-Temperature Operation	70°C 120H	samples indoors at normal
Low-Temperature Operation	-20°C 120H	temperature and humidity for 2H for function and
High-Temperature and High-Humidity	60°C 90%RH 120H	appearance inspection. The sample should meet the
Thermal Cycling Test	-20°C/0.5H ~ +70°C/0.5H 100 cycles in total	requirements on electrical performance, but be free from
Vibration Test	Frequency: 10Hz ~ 55Hz ~ 10Hz Amplitude: 0.75mm Cycle once a minute,30cycles in total (Packing Condition)	the following defects: 1. Air bubble in the module, 2. No display, 3. Glass crack.
ESD Test	$\pm 4 \text{kV}$ Human Body Mode 150pF/330Ω $\pm 8 \text{kV}$ Air Mode 150pF/330Ω	

Note:

- 1) Each module under test can only be used for one of the test items.
- 2) The quantity of samples for each test item is 2.
- 3) Fault Judgment Criterion: Basic Specifications, Electrical Specifications, Mechanical Specifications, Optical Specifications.



7. Precautions

- 7.1. The display screen consists of glass and polarizer. Since the glass is fragile, the user must pay special attention to the edge area, and protect it from falling, vibration, or mechanical impact.
- 7.2. If the display screen is damaged and the liquid crystal material leaks, be sure not to get any in the mouth. If the liquid crystal material contacts the skin or clothes, flush off with soap and water.
- 7.3. Do not apply excessive force to the display screen or the joint part, or the color will change. Do not touch the display screen with bare hands, which will stain the display area and degraded insulation between terminals (some of the appearance is determined by the polarizer).
- 7.4. The polarizer covering the display panel of the LCD module is soft and easy to be scratched, be sure to handle carefully. Do not touch, impact, press, or rub the exposed polarizers with anything harder than an HB pencil lead (e.g.: glass, tweezers, etc.). Do not place or attach anything onto the display area to avoid leaving marks. The condensed material on the surface or terminals due to cold will damage or stain the polarizer. After the test in low temperature environment, the product must be warmed up in a container before put into the room temperature environment.
- 7.5. If the display panel is stained, blow warm air onto the surface and gently wipe it with a soft and dry cloth. If it is seriously contaminated, wipe it with a wet cloth dipped in one of the following solvents:
 - glycerol
 - ethyl Alcohol

Do not scrub, and avoid damaging the display panel.

- 7.6. Solvents other than those mentioned above may damage the polarizer. In particular, never use any of the following solvents:
 - water
 - ketone
 - arene

Wipe off saliva or water drop immediately, the contact with water over a long period of time may cause deformation or color fading. Avoid contact with oil or grease.

- 7.7. Special note: minimize electrode corrosion. Because electrode corrosion can be accelerated by water droplets, condensation of humidity, or electrification in a high humidity environment.
- 7.8. Assemble the LCD Module by the mounting holes. Make sure the LCD module make sure there is no bending, distortion, or deformation. Do not forcibly pull or bend the transmission wire or the backlight wire.




- 7.9. Do not disassemble the LCD module.
- 7.10. NC terminal should be disconnected. Do not connect any device.
- 7.11. If the logic circuit power supply is off, do not send the input signal.
- 7.12. Since the LCD module is integrated with CMOS, pay special attention to the modules. To prevent electrostatic damage, be careful to maintain an suitable work environment.
 - Make sure the module has the same potential as the human body before take the LCD module out
 of the packing box for assembly. The reliable grounding is necessary during module processing.
 - The required tool, such as the electric soldering iron, must be reliably grounded. Make sure the it is connected to AC power supply, and no electric leakage. When fixing the module with electric screwdriver, it must be grounded, to reduce the electromagnetic wave generated by the electric commutator spark as much as possible.
 - Do not assemble or operate under dry condition to reduce the static electricity. To reduce static electricity, the workplace must not be too dry. The recommended relative humidity is 50 60%.
 Keep your work clothes and work table grounded as much as possible
 - The LCD module is coated with a film to protect the display surface. Be careful when peeling off
 the film to reduce the generated static electricity.
- 7.13. Since the LCD module has high precision assembly and regulation, try to avoid excessive impact on the module or making any changes:
 - Do not change the shape of the tab on the metal frame.
 - Do not drill any extra hole, modify the shape, or change the position of component on the printed circuit board.
 - Do not change or damage the pattern on the printed circuit board.
 - Never modify the zebra strip (conductive rubber) or heat seal connector.
 - Do not make any change with the electric soldering iron except for the joint.
 - Do not throw, bend or twist.

8. Packing and Storage


8.1. Packing Method

Step 1

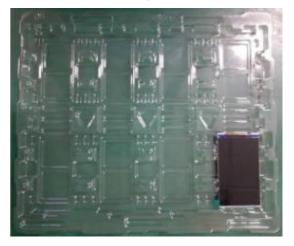

Take 1pcs of the product, put it into a anti-static bag.

Step 2

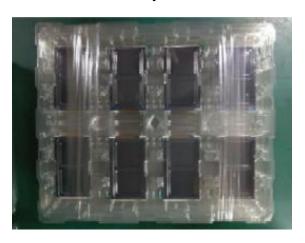

Take 2 bags of product to place into the carton, make sure they are surface to surface. Put a piece of EPE pad between the carton and the separator to protect the products.

Step 3



Put the products into cartons one by one, each carton contains 60 pieces of products.

Step 4



The cartons should be taped and shipped with labels.


8.2. Storage Method

Store in an ambient temperature of 23±5°C, and in a relative humidity of 60±15%. The storage period should not exceed 12 months. Do not expose to the sun for a long period of time.

- 8.2.1. Store in clean environment, free from dust, active gas, or solvent.
- 8.2.2. Store in anti-static environment.



8.3. Nomenclature

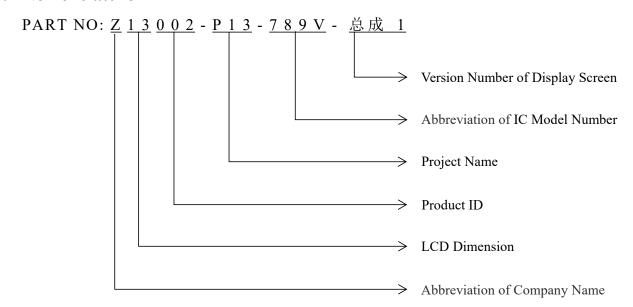

8.4. Label

